



Before you begin...

- Check all components are present by comparing pack contents to printed contents list.
- Pre-treat each Porch Canopy component using proprietary exterior grade preservative and end seal following the manufacturer's recommendations.
- We recommend that all components are finished e.g. painted, stained or varnished following the manufacturer's recommendations before fixing to wall.
- When using Porch Canopy combined with Richard Burbidge Porch Accessory Kits, please allow for the preferred height of the accessories during setting out. The maximum height of accessory kits is 2400mm.

Front

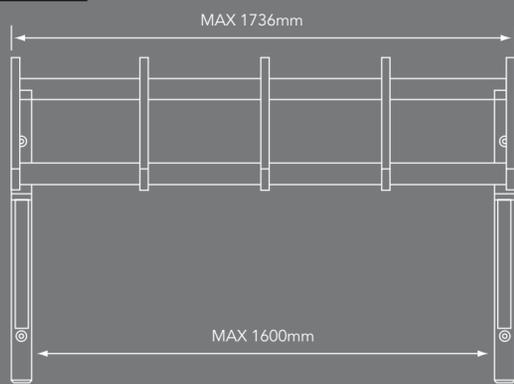

Side

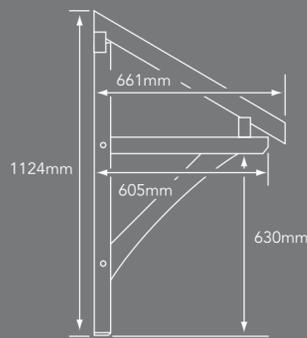

Pack contents...

	1010x68x55mm	x2
	650x90x45mm	x2
	593x68x55mm	x2
	1736x70x40mm	x2
	800x64x30mm	x5
	Ø15x105mm	x6
	40x40x9mm	x4
	37x37x25mm	x2
	Ø4x35mm	x8
	Ø5x100mm	x10

Wall fixings not included. Please seek advice to determine the correct fixing for your wall.

Tools required...

1. Drill
 2. Mallet
 3. Screwdriver
 4. Hammer
 5. Spirit level
 6. Tape measure
-



Porch Canopy

Flat Roof 1200mm to 1600mm max

Components are supplied pre-drilled.



LC003

Canopy tested to hold a weight loading of 50kg/m².

Note: Roofing, fascias, finishing components, wall fixings and exterior glue are not included. Finial sold separately.



15kg

© Richard Burbidge Ltd. 2013

Richard Burbidge Porch Canopies have been structurally tested to hold a maximum weight loading of 50kg/m².

Structural calculations are based on fixing to masonry surfaces such as brick, block and stone.

If fixing to other surfaces such as timber, we recommend you seek professional guidance/advice via a structural engineer.

Assembly instructions...



Assemble the Gallows Brackets using exterior grade wood glue (Fig 1a). Knock the 15mm diameter dowels supplied into the pre-machined draw-bored tenons (Fig 1b).



Measure and mark the Gallows Brackets positions on wall to a maximum span of 1600mm (Fig 2).



Measure and mark to the wall the back purlin preferred position above door (Fig 3).



Offer and fix the assembled Gallows Brackets to the pre-marked wall positions and fix using 2 x 12mm Steel Bolts (*not supplied). Glue the timber cover caps supplied to hide fixings (Fig 4).



Fix the back purlin to the wall using minimum 2 x 100mm frame fixings or similar (not supplied) (Fig 5).



Use a rafter as a guide to establish the exact location of the front purlin to the top of the Gallows Brackets. Fix the front purlin to the Gallows Brackets using the Metal Angle Brackets and 35mmscrews supplied (Fig 6).



Measure the rafter's positions to the front and back purlins to space out evenly. Fix the rafters to the purlins using the 100mm screws supplied (Fig 7).



Maintenance - We recommend you retreat your Porch Canopy and Accessories Kits annually by cleaning and repainting, staining or varnishing following manufacturer's recommendations.



5 000473 032275

We're here when you need us:
Customer Services:
+44 (0)1691 678300
Technical Helpline:
+44 (0)1691 678212
www.richardburbidge.com